


DRIFTER DEPLOYMENT INSTRUCTIONS

Please Read Carefully

FOLD


1. Remove protective plastic wrap

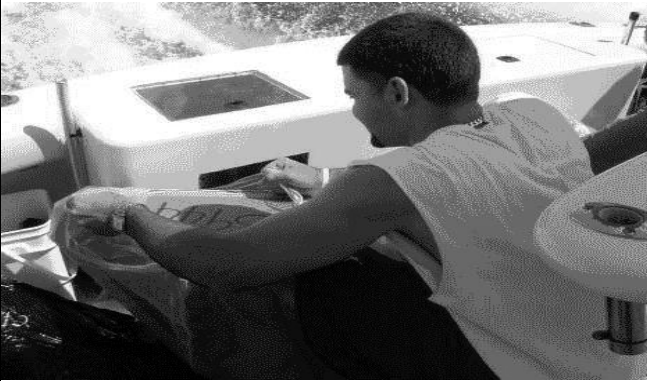

2. DO NOT REMOVE paper tape or cardboard.
ONLY remove plastic wrap.



3. Throw the buoy into the water.

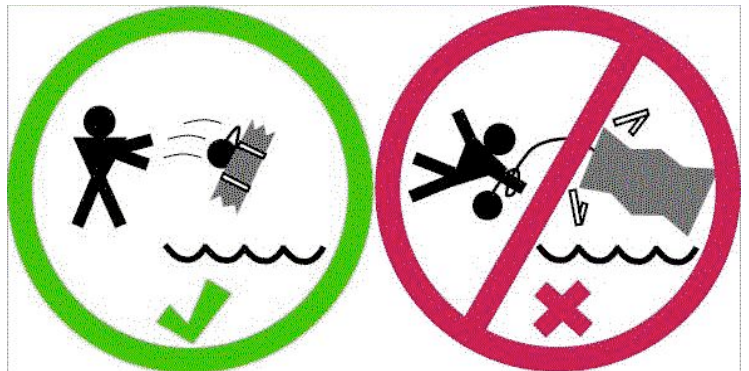

DRIFTER DEPLOYMENT INSTRUCTIONS SVP AND SVP-BAROMETER DRIFTERS

- 1) Before deployment, remove **ONLY** the plastic shrink-wrap.
- 2) **DO NOT REMOVE** the paper tape securing the drogue and/or tether. Likewise, **DO NOT REMOVE** the cardboard surrounding the float.

WARNING: **DO NOT REMOVE** the paper tape securing the tether and drogue. If you do, the drogue and/or tether can unfurl during deployment and may cause injury!

- 3) Record the ID number listed on the drifter. This number can be found on the shipping container, the plastic shrink-wrap, or the protective cardboard box. It is also listed on the surface float itself.
- 4) Deploy the buoy from the stern, at lowest possible deck (preferably less than 10 meters, including heave), into the sea. The ship may be traveling between 1 and 20 knots. The tether and drogue are secured with paper tape that will dissolve in the water.
- 5) Record the date, time (GMT), coordinates at deployment, and deployment details, then email this information to the Global Drifter Program.

Thank you kindly for your assistance!


Log Sheet

Ship Name: _____

Drifter ID #	Date	Time (GMT)	Latitude	Longitude
xxxxxxxxx	mm/dd/yyyy	hh:mm	DD mm.mm N/S	DDD mm.mm E/W
_____	___/___/___	__:__	_____	_____

Deployed From: Starboard / Port
Mid-Ship / Stern

Ship Speed: _____ knots
Height Above Mean Sea Level: _____ meters

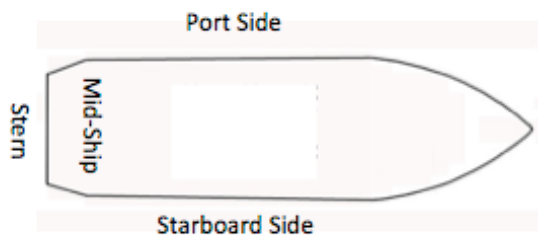

Submit deployment information to:

Shaun Dolk
Global Drifter Program
NOAA/AOML/PhOD
4301 Rickenbacker Cswy
Miami, FL 33149, USA
Tel: 305-361-4546
E-mail: Shaun.Dolk@noaa.gov

Web Submission: http://www.aoml.noaa.gov/phod/dac/dep_form.html